

## User Guide

Panasonic KX-TES824/308

Voicemail BV



### To Forward to Voicemail

**All Calls:** Off-Hook, Press FWD/DND, Dial 1725#, On-Hook

**Busy/No Answer:** Off Hook, Press FWD/DND, Dial 2725#, On-Hook

**For SLT's** Dial 71 instead of FWD DND

### To View and Play Voice Messages On Key phones

Press Message Button

1 – Play From Start

2 – Next

3 – Erase Twice

4 – Previous

### To Play Messages on SLT

Off-Hook, Dial 725 2 #

### To Erase All

Off-Hook, Dial 725 0 #

### Record Common BV

Off-Hook, Dial 722 (01-24) 1#, Record Message then Press Store.

### Play Common BV

Off-Hook, Dial 722 (01-24) 2#

### Delete Common BV

Off-Hook, Dial 722 (01-24) 0#

### Record Personal BV

Off-Hook, Dial 7231 #, Record Message Then Press Store

### Play Personal BV

Off-Hook, Dial 7232 #

### Delete Personal BV

Off-Hook, Dial 7230 #