

User Guide

Panasonic KX-TES824/308
Voicemail BV



To Forward Calls to Voicemail	All Calls: 71(1) 725 # Busy/No Answer: 71(2) 725 #
To Leave a Direct Message	7251, Extension Number
To View and Play Voice Messages	Message, Off Hook Message 1 – Play From Start 2 – Next 3 – Erase Twice 4 – Previous
To Play All	725 2 #
To Erase All	725 0 #
Record Common BV	722 (01-24) 1 #
Play Common BV	722 (01-24) 2 #
Delete Common BV	722 (01-24) 0 #
Record Personal BV	7231 #
Play Personal BV	7232 #
Delete Personal BV	7230 #