

User Guide

Panasonic KXT206

Outbound Calling	Off-hook, Press Line Button or Dial 9, Dial Phone Number
Internal Calling	Off-hook, Dial Extension Number (21-26)
Call Pick-Up	Off-hook or Press either Line or Intercom Button
Call Transfer	Press Transfer, Dial Extension Number, Announce Call, On-hook
Call Hold	Press Hold Button. To Retrieve, Press Line or Intercom Button
Conference Call	Whilst on a Call, Press CONF, Dial Third Party, Press CONF
Paging Extensions	Off-hook, Dial 33, Hear Confirmation Tone, Make Announcement
Paging Answer	Off-hook, Dial 43, Hear Confirmation Tone, Speak
Call Forwarding Set	Off-hook, Press FWD/DND, Dial Extension Number (21-26), On-hook
Call Forwarding Cancel	Off-hook, Press FWD/DND, Dial 0, On-hook
Do Not Disturb Set	Off-hook, Press FWD/DND, Dial 720#, On-hook
Do Not Disturb Cancel	Off-hook, Press FWD/DND, 70#, On-hook
One-Touch Dialling Set	Press Desired Button, Dial 9 and Number, Press Store
One-Touch Dialling use	Off-hook, Press the Button of the Person whom you wish to call
System Speed-Dialling use	Off-hook, Press * Dial System Speed Dial Number (00-39)

- System Speed Dialling:**
 - Use Extension 21 Only**
Enter Programming Mode- 620620 6#
Dial #00
Enter Speed Dial Location Code (00-79)
Enter Telephone Number to Store (Prefix with 9)
Press #
To Exit Programming Mode- 6206#
- Changing the Time:**
 - Use Extension 21 Only**
On/Off (SP-Phone) or Lift Receiver
Dial 77
HH MM (12hr)
0 (AM) or 1 (PM)
Press #
On/Off (SP-Phone) or Replace Receiver



Useful Information

For Technical Assistance or to Report a Fault: Call 0870 891 9000
For Additional User Information on your Equipment: www.overline.com
For Details or to Order Additional products or Services: Call 0870 891 9000