










User Guide

Panasonic DECTS on KXTES824 & KXTEA308



| | |
|-------------------------------|---|
| Outbound Calling | Press  Dial 9, then Enter Phone Number |
| Internal Calling | Press  Dial Desired Extension Number |
| Line Call Pick-Up | Press  and dial 40 |
| Extension Call Pick-Up | Press  add 4 then Extension Number. |
| Call Transfer | Press 'R' Wait for Tone, Dial Extension Number, Announce Call, Hang Up |
| Call Hold | Press 'R' Button. To Retrieve, Press 'R' Button |
| Paging Extensions | Press  Dial 330, Hear Confirmation Tone, Make Announcement, Hang up. |
| Call Forward Internal | Press  Dial *711 (Ext Number) #, Hang up |
| Call Forward External | Press  Dial *713 (9 + Number) #, Hang up |
| Call Forward Cancel | Press  Dial *710 #, Hang up |
| System Speed-Dialling | Press  Dial * and Enter Speed Dial Number (00-99) |